



## Service Maintenance Guide - Level B Service Details

# Details

### *Inspect*

- Drive Belts / Hoses / Cables
- Lights And Horn
- Air Filter
- Tyres
- Fluids
- Brake Pads / Disc And Shoes
- Other Brake Components
- Spark Plugs
- Linkage And Contact Points
- Cooling System
- Vaccum Hoses And Connections
- Clutch And Exhaust System
- Automatic / Manual Transmission
- Power Steering Fluids / Lines For Level And Leaks
- Steering Gear And Linkage
- Axle Drive Shafts And Suspension Parts For Wear
- Tyres And Rotate

### *Adjust*

- Tyre Pressure
- Lubricate Locks, Hinges And Hood Latches
- Clean Air Filter

### *Change*

- Engine Oil And Filter